

# TOLLWAY LOCATING PROCEDURE FOR OBTAINING SOIL BORINGS

**MUST REQUEST A JOINT MEET FOR ALL SOIL BORING LOCATE REQUESTS.**

Joint Meets require the same two (2) day notice. After the Joint Meet the area will be marked within two (2) more days – a total of 4 days.

Pre-mark (White Line) the soil boring location with painted white flags or 40" tall wood lathes -and the number of the soil borings – in the field.


Prepare a sketch or plan sheet of the area showing the approximate location of each bore hole and the bore hole number.

Request a Tollway locate with a Web A-36 in order to do any underground work on Tollway right-of-way property. Must be entered at [www.illinoisvirtualltolway.com/utilitylocates](http://www.illinoisvirtualltolway.com/utilitylocates)

Must have a Permit/Contract number of the job to enter.

**A SKETCH OR PLAN SHEET SHOWING LOCATION AND NUMBER OF THE BORE HOLES MUST BE INCLUDED WITH THE LOCATE REQUEST.**

Tollway facilities and the fiber optic cables will be located and marked in the area of the bore holes.

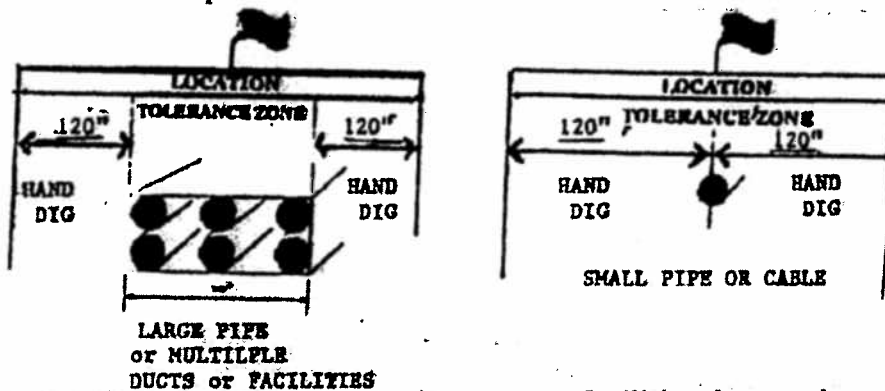

The contractor must hand dig and expose (pothole) Tollway facilities that are located within 10 feet of the soil boring location. Tollway facilities are marked within 48 hours/two (2) business days after the Joint Meet and are valid for 28 days.

Unless contacted, the soil-boring contractor can proceed with the work after the 48 hour period.

Tollway locates apply only to Tollway facilities. Contact J.U.L.I.E. to locate other utilities. Utility owners that do not participate in the J.U.L.I.E. system must be contacted directly.

Contact Patricia Mathez  
Locate web address  
E-mail address  
Direct Fax

630/241-6800 extension 3306  
[www.illinoisvirtualltolway.com/utilitylocates](http://www.illinoisvirtualltolway.com/utilitylocates)  
[pmathez@getipass.com](mailto:pmathez@getipass.com)  
630.271.7568